COOKTOP PARTS

For Model: RF365PXYW2, RF365PXYN2, RF365PXYQ2, RF365PXYZ2
(White) (Almond) (Designer White)(Designer Almond)

30" ELECTRIC FREESTANDING SELF-CLEAN RANGE

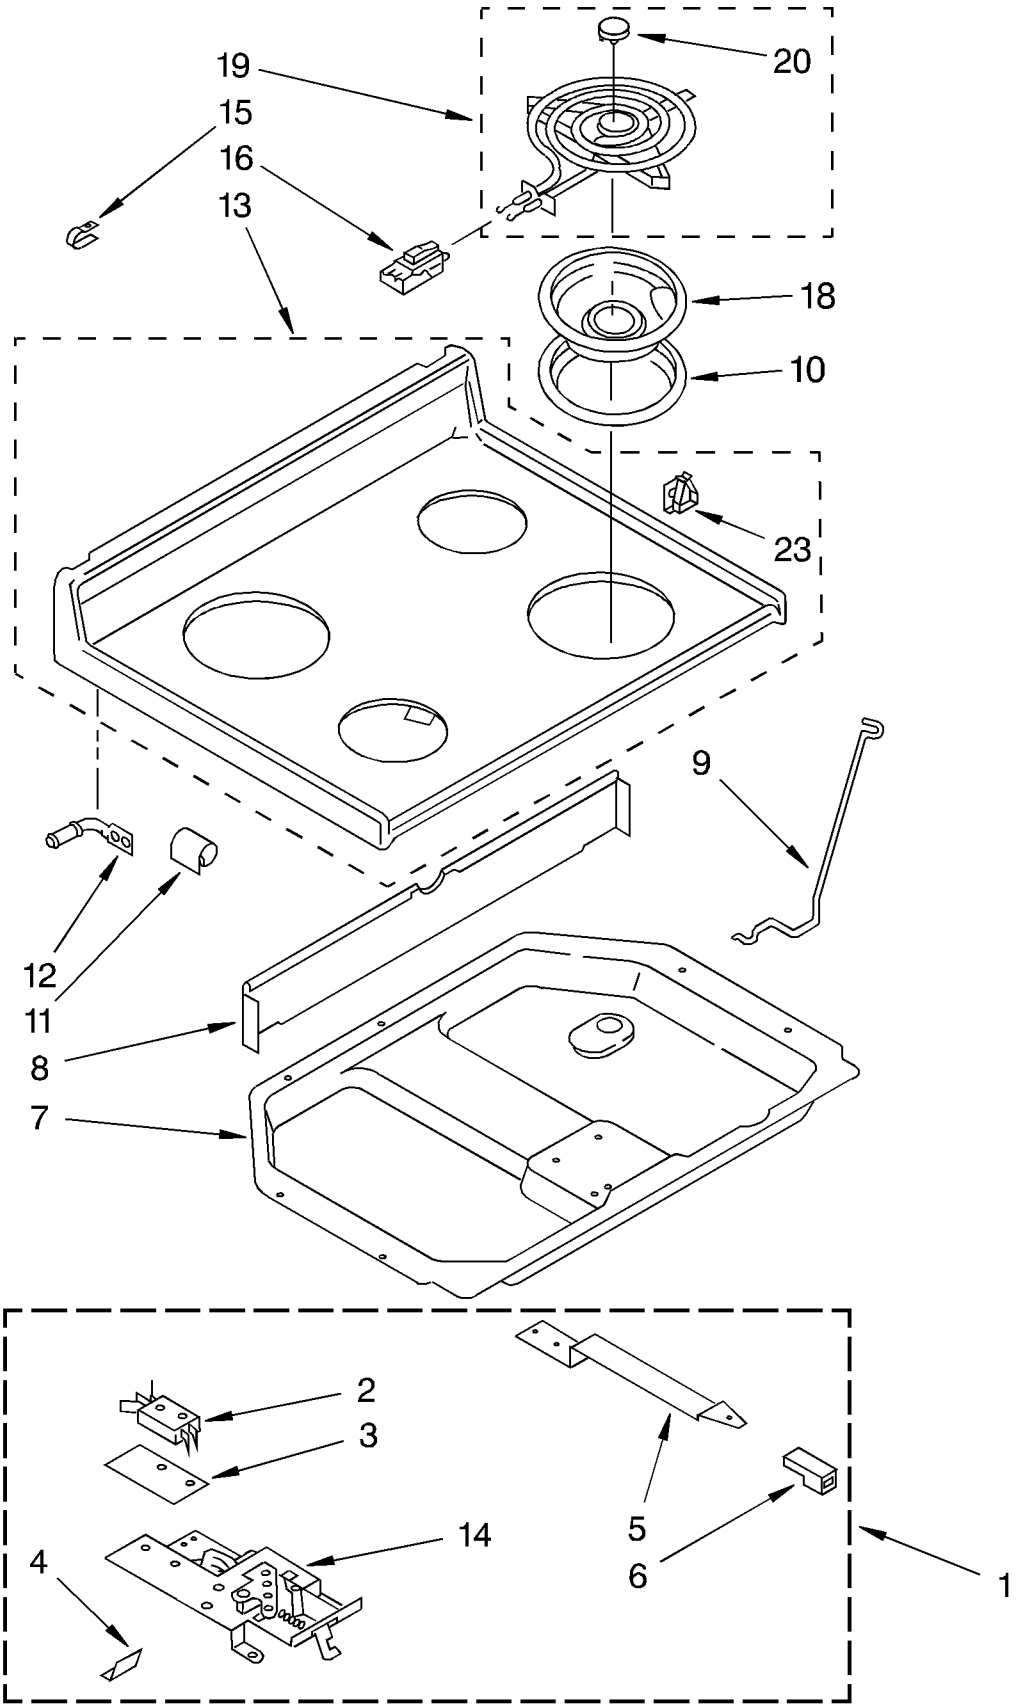

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3183959	Latch Asm Complete W/Wiring Harness
	3183960	Designer White Mdl
	3176798	Designer Almond
	343641	Screw, 10-16 x 1/2 (2)
2	308185	Safety Switch
	98106	Screw (2)
3	309245	Insulator, Switch
4	313035	Shield, Latch Terminal
	309258	Screw, 6 x 3/8B (2)
	308422	Screw (2)
5	3169081	Handle, Latch
	3150175	Designer White Mdl
	3150175	Designer Almond
	155023	Screw, 8-18 x 1/4
6	3148684	Knob, Latch
	3150174	Designer White Mdl
	3169459	Designer Almond
7	3169186	Box, Burner
	309112	Screw, 10A x 3/8 (4)
8	307973	Shield, Wiring
	343641	Screw, 10-16 x 1/2 (4)
9	3148659	Rod, Cooktop
10		Ring, Adapter Designer Mdl. Only
	3150244	6" (2)
	3150245	8" (2)
11	307965	Bracket (2)
	343641	Screw (4)
12	307966	Pin, Cooktop (2)
	343641	Screw, 10-16 x 1/2 (4)
13		Cooktop
	3170981	White
	3170982	Almond
	690989	Screw, 10-32 x 1/2
14	3148668	Latch Assy.
15	308605	Strain Relief
	343641	Screw, 10-16 x 1/2
16	312606	Receptacle Clip (4)
	313808	Screw (4)
18		Pan, Reflector Designer Model
	3150198	6" (2)
	3150199	8" (2) Pan-Combination
	3169204	6" White/Almond (Model)
	3169205	8" White/Almond (Model)
19	660529	Unit, Surface 6" L.F. & R.R.
	660533	Unit, Surface 8" R.F. & L.R (Includes Illus. 20)
20	309195	Medallion (4)
23	3148790	Hold Down Clip (4)
	814102	Nut (4)
	487887	Screw (4)

LITERATURE PARTS

LIT3187321	Installation Instructions
LIT3150400	Installation Instr (Templet)
LIT3169412	Wiring Diagram
LIT3187478	Use & Care Guide

CONTROL PANEL PARTS

For Model: RF365PXYW2, RF365PXYN2, RF365PXYQ2, RF365PXYZ2
(White) (Almond) (Designer White)(Designer Almond)

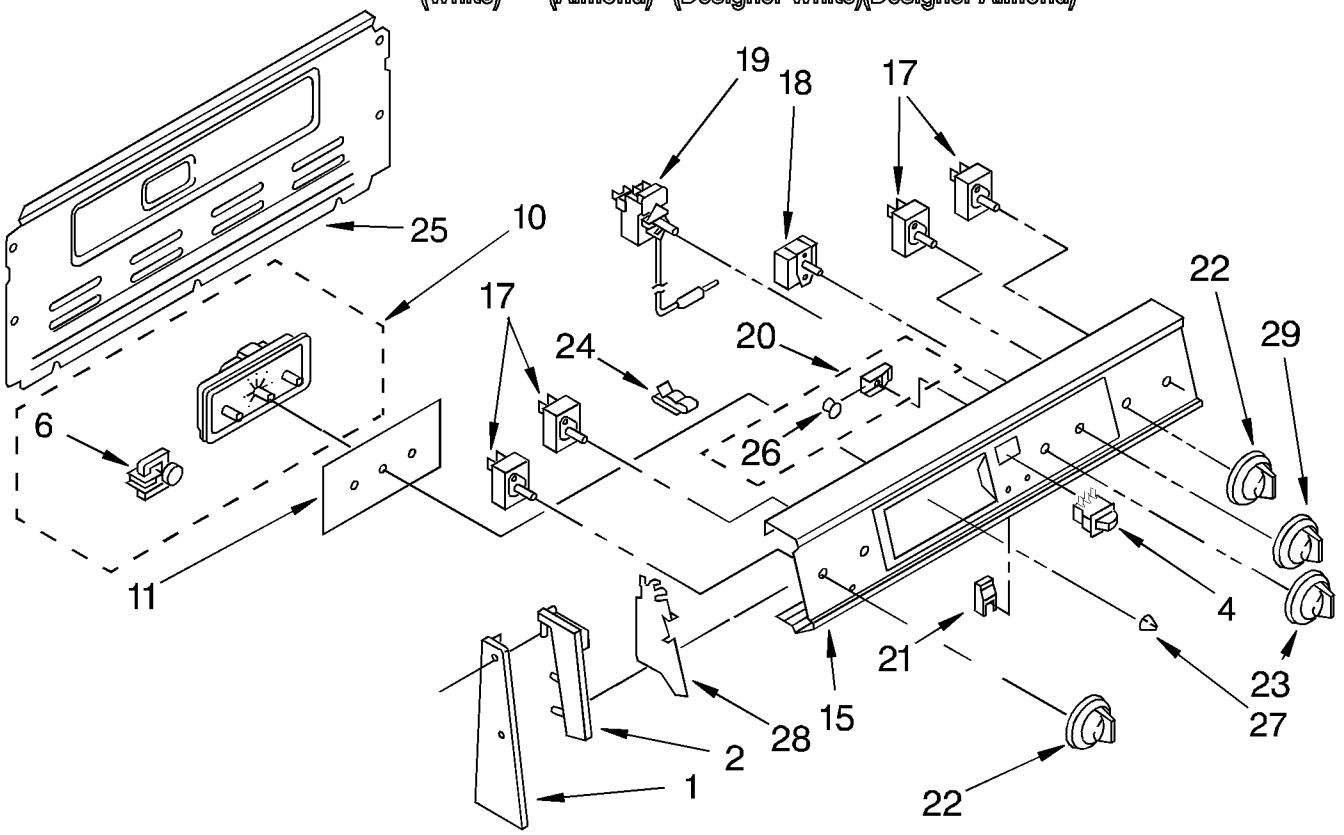

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	313191	End Trim R.H.
	3169468	Designer Almond
	313190	End Trim L.H.
	3169469	Designer Almond
	309112	Screw, 10A x 3/8 (2)
	343641	Screw, 10-16 x 1/2 (4)
2	3150441	End Cap R.H.
	313230	Designer White Mdl
	3150443	Designer Almond
	3150442	End Cap L.H.
	3150444	Designer Almond
	313231	Designer White Mdl
	254225	Screw, 8BT x 1/4 (4)
4	3148564	Switch, Rocker
	3149360	Designer White Mdl
	3169466	Designer Almond
6	309822	Timer Motor
10	661458	Timer, Clock
	3183064	Designer White Mdl
	3169470	Designer Almond (Includes #6)
	246132	Screw, 8A x 3/8 (2)
11	313513	Glass, Timer
15	3183814	Panel, Control
	3183815	Designer White Mdl
	3183822	Designer Almond
	312604	Screw, 8-18 x 5/8 (4)
	690989	Screw, 10-32 x 1/2
17		Switch, Infinite
	3148951	6" (2)
	3148954	8" (2)
	308119	Screw, 8-32 x 1/4 (8)
18	3148419	Switch, Selector (5 Position)
	3150344	Screw, 8-32 x 1/4 (2)
19	3185625	Thermostat, 0ven Pyro
	311932	Screw, 6-32 x 1/4 (2)
20	314031	Light, Indicator (Oven Unit) (Includes Illus. 26)
21	3150662	Light, Indicator (Surface Unit) (Includes Illus. 26)
22	3183118	Knob, Infinite (4)
	3183117	Designer White Mdl
	3183114	Designer Almond
23	3183103	Knob, Oven Temp.
	3183104	Designer White Mdl
	3183131	Designer Almond
24	313570	Tube Clip
25	3187332	Rear Cover
	343641	Screw, 10-16 x 1/2 (8)
26	313101	Lens, Amber (2)
27	3169182	Knob, Timer (3)
	3169184	Designer White Mdl
	3169467	Designer Almond
28	313608	Shield, Glass (2)
	246132	Screw, 8A x 3/8 (2)
29	3183115	Knob (Selector)
	3183116	Designer White Mdl
	3183111	Designer Almond

OVEN PARTS

For Model: RF365PXYW2, RF365PXYN2, RF365PXYQ2, RF365PXYZ2

(White) (Almond) (Designer White)(Designer Almond)

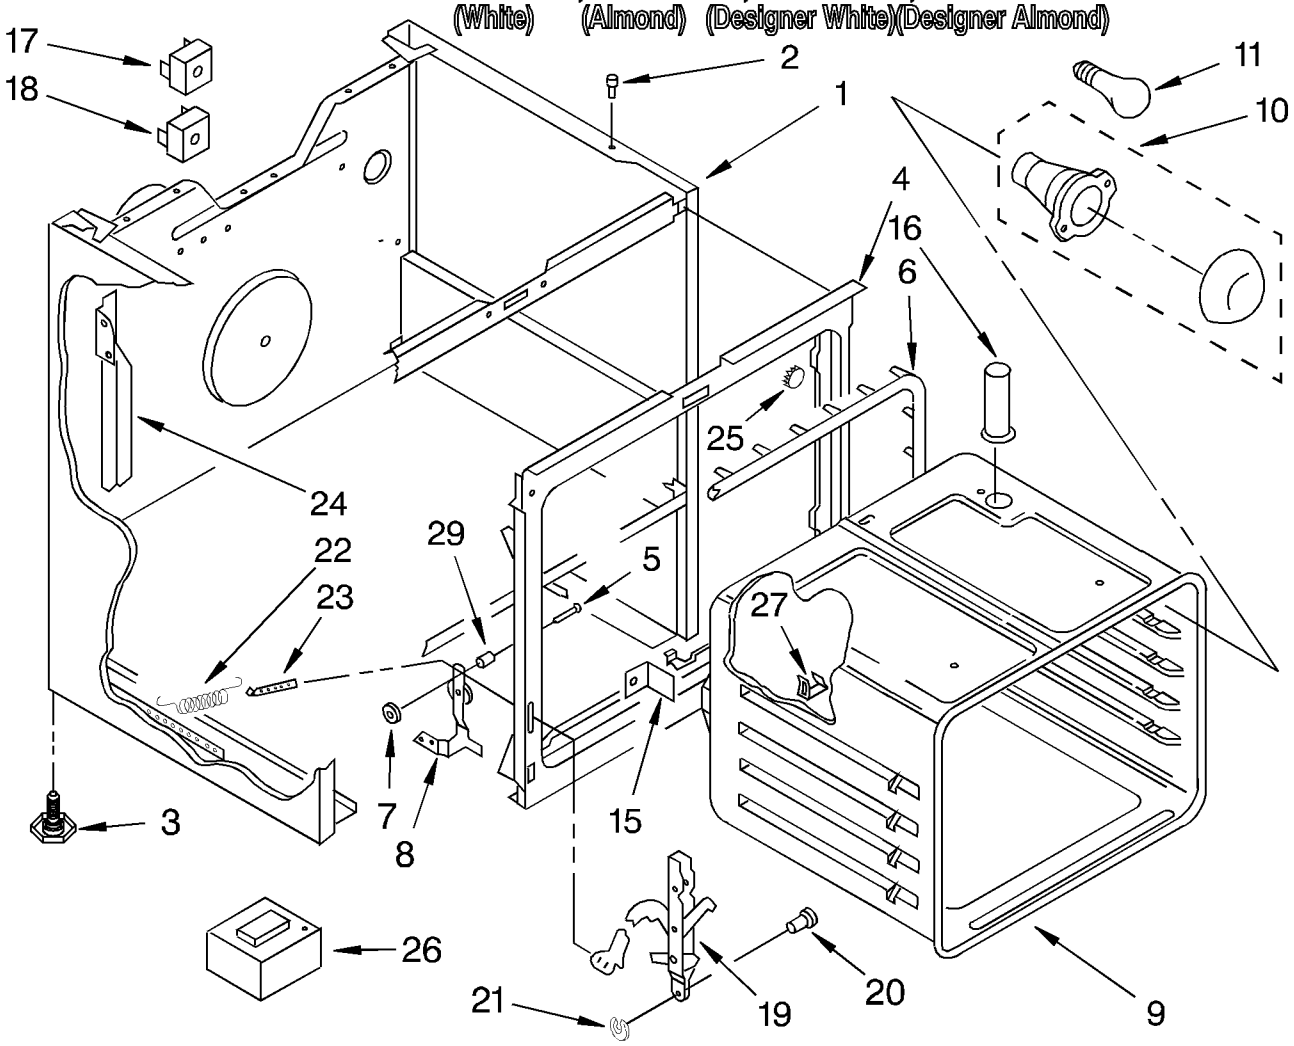

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Main Chassis
	330086	White
	330090	Almond
	690989	Screw, 10-32 x 1/2
	343641	Screw, 10-16 x 1/2 (2)
2	238614	Bumper, Cooktop (2)
3	312701	Leg Leveling (4)
4	3176718	Frame, Front
	343641	Screw (Sides)
	3150537	Screw (Top)
5	307985	Pin, Hinge
6	3169251	Seal, Door
7	308306	Pushnut
8	3176710	Hinge, R.H.
	3176711	Hinge, L.H.
	343641	Screw, 10-16 x 1/2 (4)
9	3176611	Oven (30" Pyro)
	311056	Screw (2)
	3150537	Screw
10	3150505	Socket, Lamp
11	311255	Bulb, Oven Light
15	311220	Bracket, Oven Mounting
	343641	Screw, 10-16 x 1/2 (4)
16	3169108	Vent, Oven
	307748	Screw, 10A x 1/2 (2)
17	314209	Switch, Broil
18	314210	Switch, Bake
19	3176709	Channel, Arm (2)
20	307986	Hinge Pin (2)
21	307594	Ring, Retainer (2)
22	308126	Spring, Oven Door (2)
23	308125	Anchor, Spring (2)
24	313196	Support, L.H. Channel
	313197	Support, R.H. Channel
	343641	Screw, 10-16 x 1/2 (4)
25	308535	Button Plug
26	3169279	Block, Balance
	340184	Screw
27	313382	Clip, Therm Bulb (2)
29	309111	Snubber, Door (2)

Following Parts Not Illustrated

	3169093	Insulation, Wrap
	3169094	Insulation, Oven Back
	814091	Anti-Tip Kit (Floor Mount)

DOOR AND DRAWER PARTS

For Model: RF365PXYW2, RF365PXYN2, RF365PXYQ2, RF365PXYZ2
(White) (Almond) (Designer White)(Designer Almond)

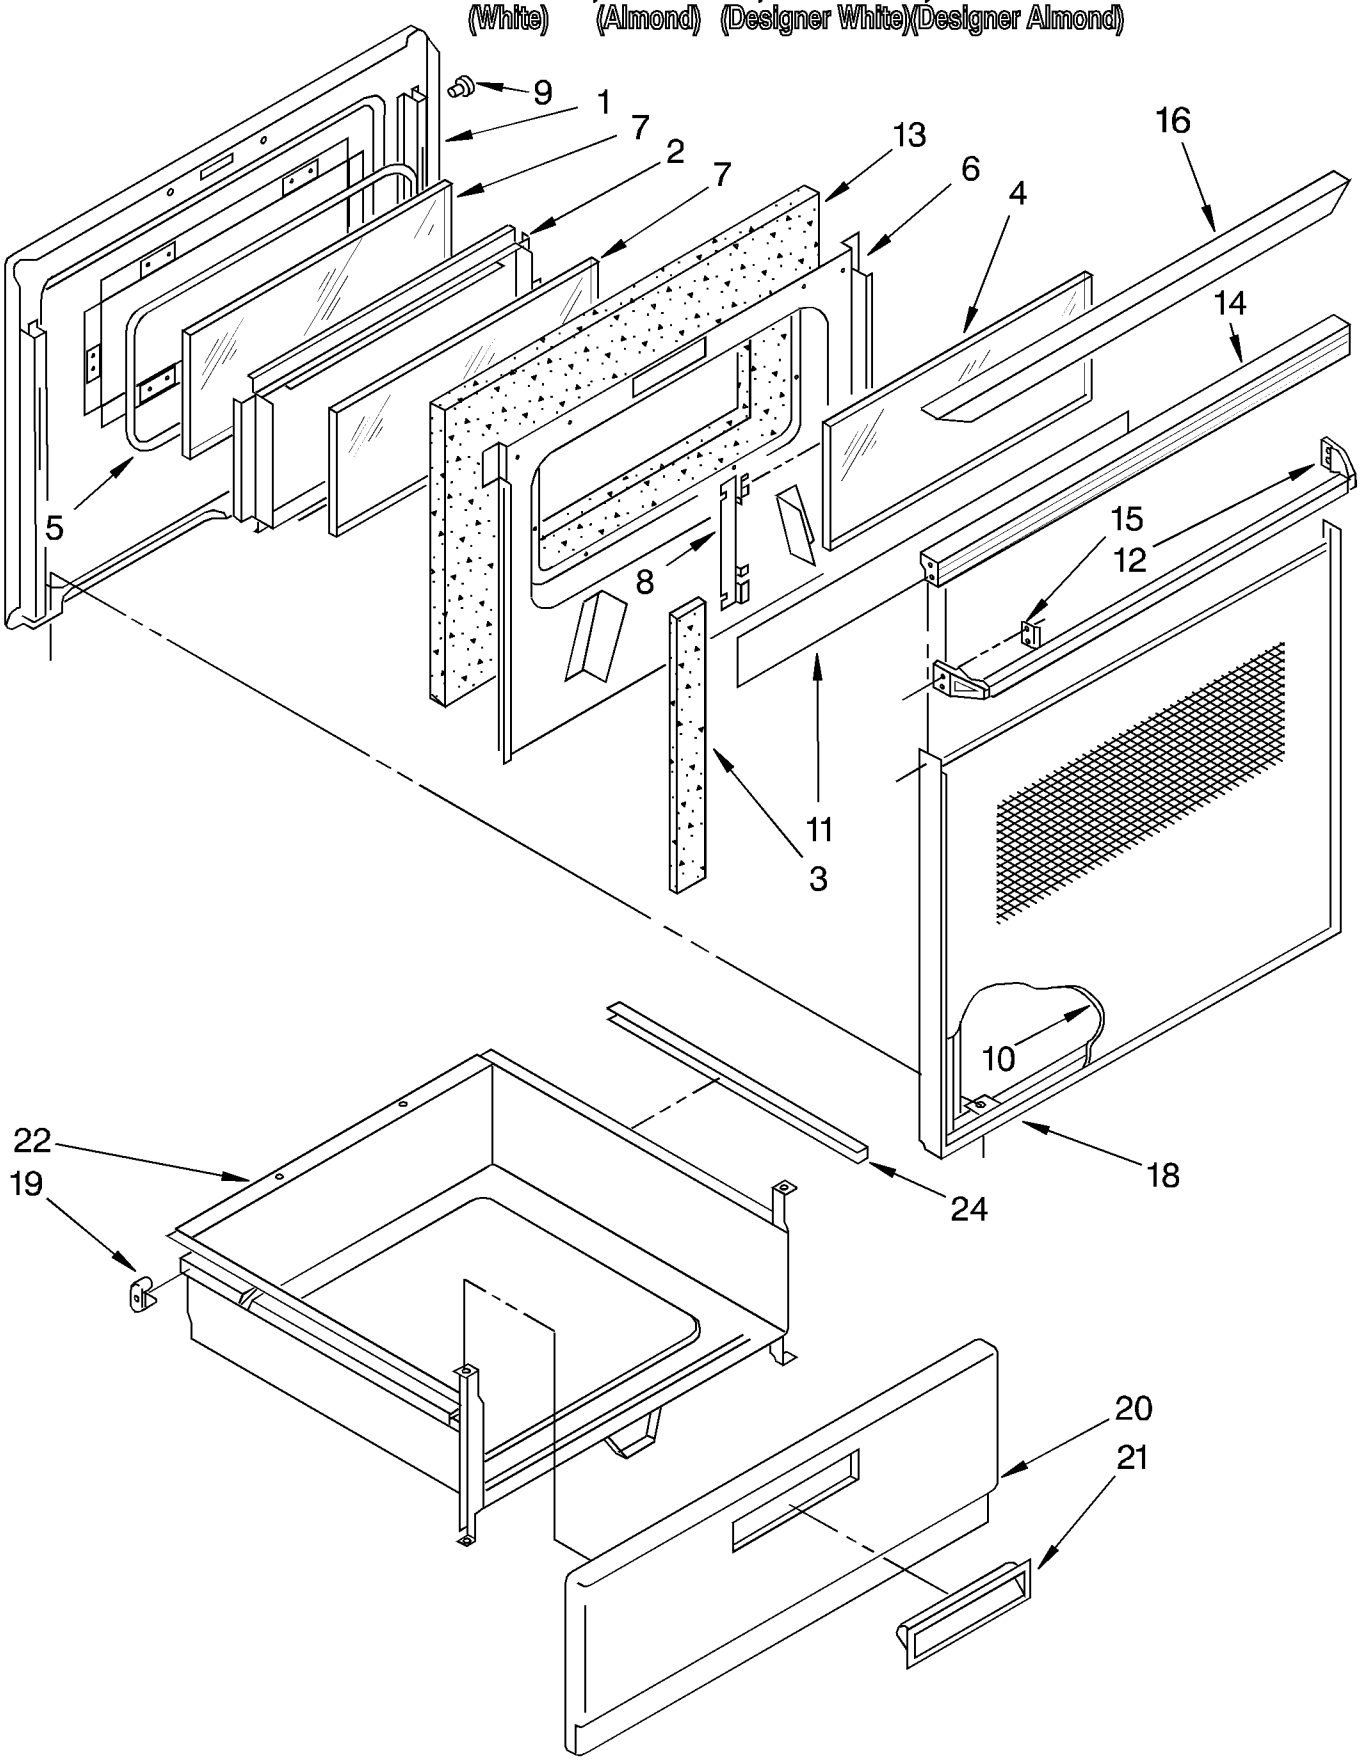

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172218	Liner, Oven Door
2	3148234	Frame, Glass
	3148443	Screw (6)
3	3148441	Seal, Foam
4	3169202	Glass, Clear
5	3148183	Seal, Window
6	3148159	Retainer, Insulation
	3148443	Screw (4)
7	3169203	Glass, Inside/Outside
8	3148187	Retainer, Glass
	3148443	Screw (4)
9	3148182	Bumper (4)
10	3148185	Glass, Door
	3149049	Designer White Mdl
	3149050	Designer Almond
11	3169191	Foil
12	3148228	Handle, Door
	3149354	Designer White Mdl
	3169460	Designer Almond
13	3147951	Insulation, Door
14	3148223	Top, Door
	307748	Screw
	3149355	Designer White Mdl
	3393008	Screw
	3169458	Designer Almond
15	3148282	Clip (2)
16		Cap, Door Top
	3181363	Designer White Mdl.
	3188375	Designer Almond
18	3148235	Frame, Glass
	3187921	Designer Almond
	355515	Screw (4)
	307748	Screw (3)
19	307980	Glide, Rear
	313349	Screw (2)
20		Panel, Drawer
	3150676	White
	3150677	Almond
	313349	Screw
21		Handle, Snap-In
	3150612	White
	3150613	Almond
22	327887	Drawer, Utility
24	309329	Protector, Drawer (2)

UNIT PARTS

For Model: RF365PXYW2, RF365PXYN2, RF365PXYQ2, RF365PXYZ2
(White) (Almond) (Designer White)(Designer Almond)

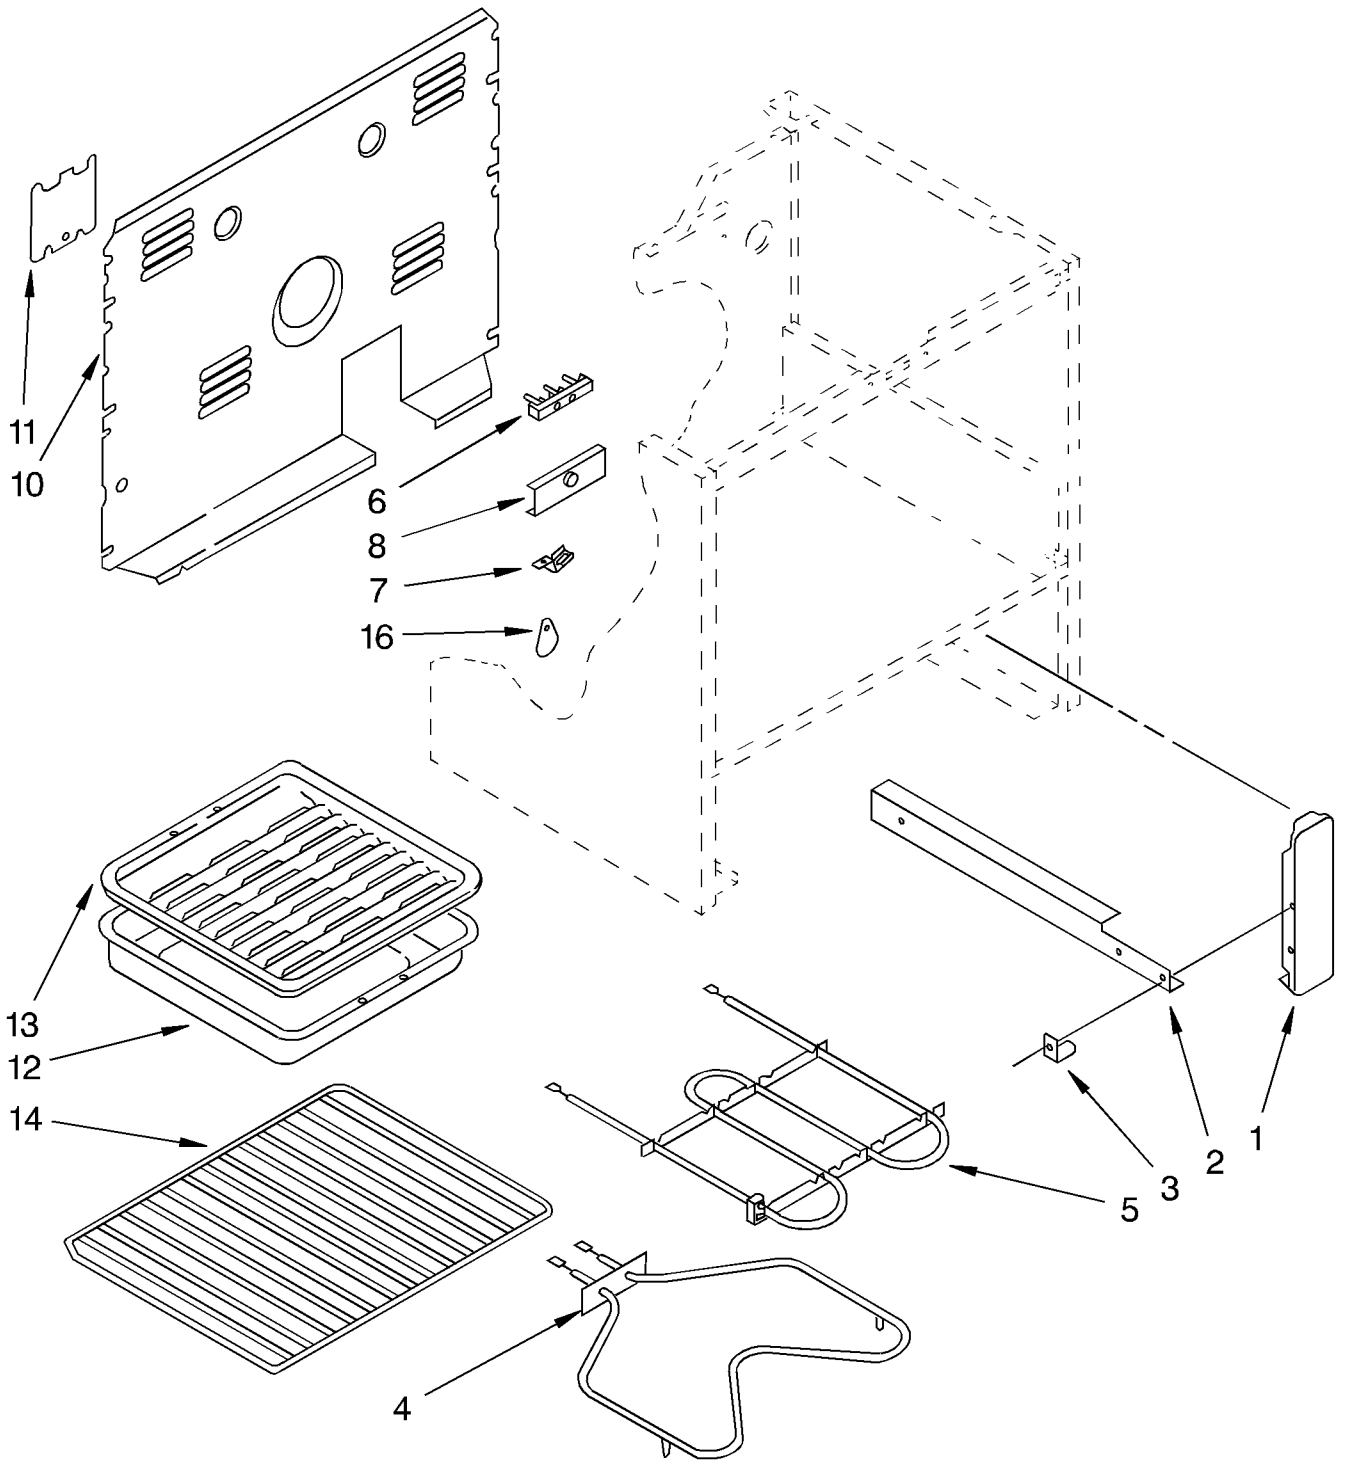

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	307981	Bracket, Mounting (2)
2	3149255	Rail R.H. (Includes Illus. 3)
	3149256	Rail L.H. (Includes Illus. 3)
	343641	Screw, 10-16 x 1/2
3	3149257	Glide, Front (2)
	307748	Screw (2)
4	661170	Unit, Bake (240V)
	308180	(Alt.)
	313827	(Alt.)
	312309	Unit, Bake (208V)
	3150532	Screw (2)
5	660579	Unit, Broil
	311714	(Alt.)
	311713	(Alt.)
	312308	Unit, Broil (208V)
	3150532	Screw (2)
6	258076	Terminal Block
	98884	Screw, 10-16 x 1 (2)
	112432	Nut (6)
7	308498	Ground Strap
	313660	Clip
	690989	Screw, 10-32 x 1/2
8	3150190	Bracket, Service
	343641	Screw, 10-16 x 1/2 (2)
10	3148975	Cover, Rear
	343641	Screw, 10-16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10-16 x 1/2 (2)
12	3169076	Pan, Broiler
13	3147563	Rack, Broiler
14	308173	Rack, Oven (2)
16	311982	Plate, Cover (2)
	3150532	Screw, 10A x 1/2 (2)

WIRING HARNESS PARTS

For Model: RF365PXYW2, RF365PXYN2, RF365PXYQ2, RF365PXYZ2
(White) (Almond) (Designer White)(Designer Almond)

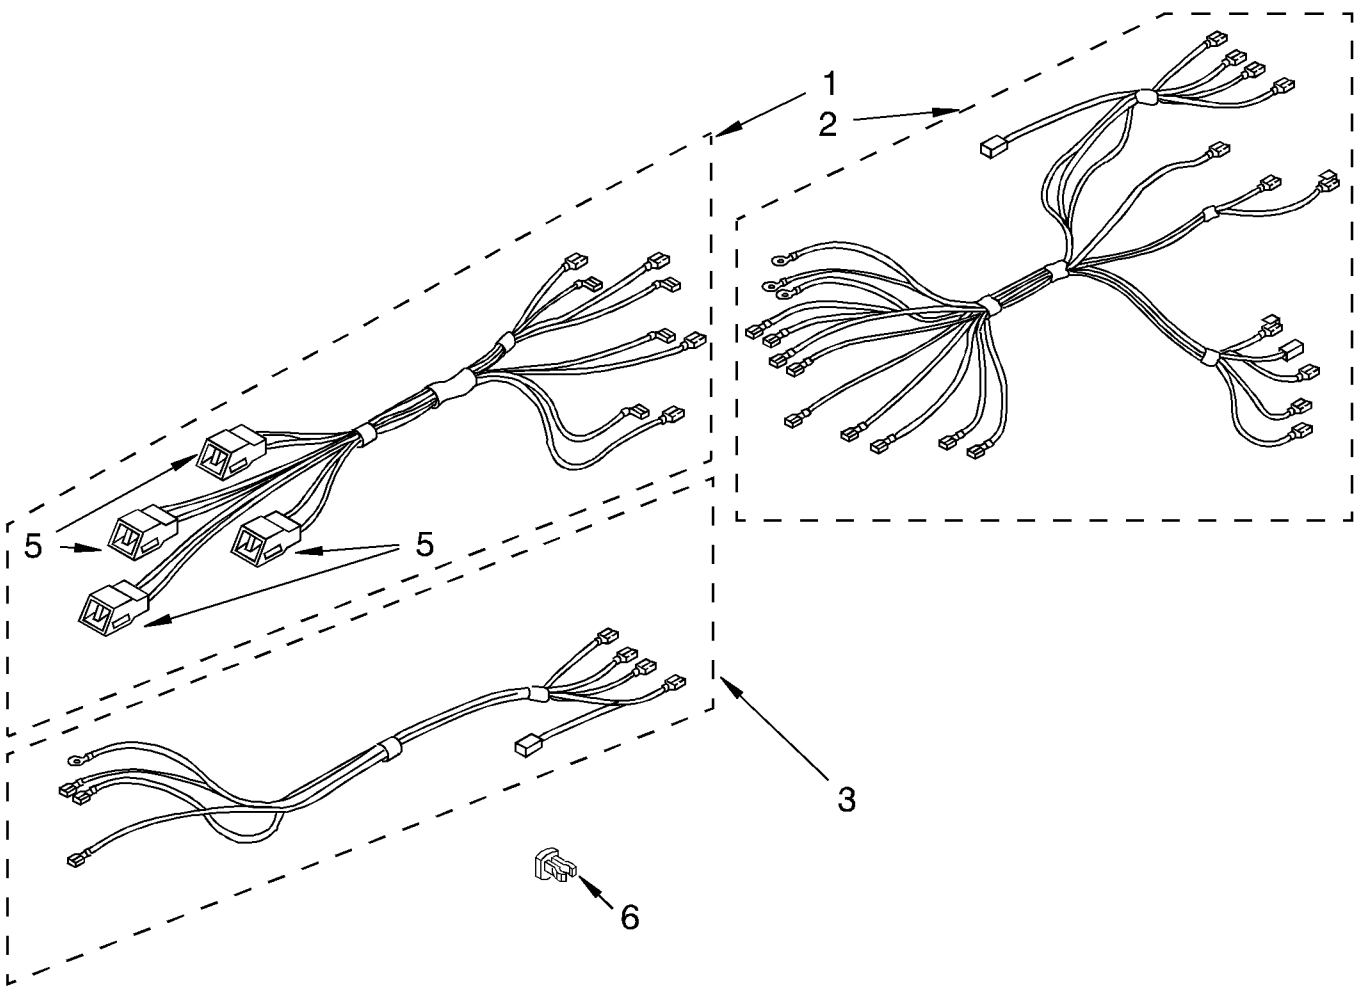

1	3149881	Wiring Harness (Suface Unit)
2	3169337	Wiring Harness (Oven)
3	3183962	Wiring Harness (Lock Switch)
5	330031	Receptacle
6	3169449	Clip, Snap-In

OPTIONAL PARTS NOT INCLUDED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~c
242820	Wire, Black 14 Ga. 150~c
242821	Wire, Blue 14 Ga. 150~c
242822	Wire, Brown 14 Ga. 150~c
242830	Wire, Brown 14 Ga. 200~c
242823	Wire, Green 14 Ga. 150~c
242824	Wire, Orange 14 Ga. 150~c
242829	Wire, Red 12 Ga. 150~c
242825	Wire, Red 14 Ga. 150~c
242831	Wire, Red 14 Ga. 200~c
242826	Wire, White 14 Ga. 150~c
242827	Wire, Yellow 14 Ga. 150~c
242832	Wire, Yellow 14 Ga. 200~c

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
511873	**White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)
206925	Leveler (Thinner) (2 oz.)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)

**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean (1/2 Pt.)
261582	Grease

Following May Be Purchased

DO-IT-YOURSELF REPAIR MANUALS

LIT677973	Manual, Range

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')

ANTI-TIP KIT

814234	Wall Mount